

User's Manual



M71

 beetel

Before use put three 'AA' size , 1.5V batteries into the battery compartment otherwise Back Light will not come in the LCD Display of your telephone.

Dear Customer,

Congratulations on your choice of a world-class product **M71** Caller ID Phone from beetel. Its amazing features have specially designed to add comfort and ease to your life.

The **M71** will make receiving and sending calls the most pleasant experience for you. This manual is designed to familiarize you with this phone. To get maximum use from your new phone, we suggest that you read this manual carefully before operating it. For any clarification or assistance, kindly contact us at the address given below.

Customer Support Division:

Email: customer.care@beetel.in

Toll Free No: - 1800-10-23456

For proper Recycling and disposal of this product carry it to the nearest collection point or call the toll free number 1800-102-8632.

For more details pls. refer the URL to visit our website E-waste page;

<http://www.brightstarcorp.in/beetel/aboutus/sustainability.html>

This product conforms to the Essential Requirements of TEC.

Special Features

- 16-digit LCD display with Green back light.
- 99 Nos Incoming Call Memory.
- 6 One-Touch Memory.
- Intercom and Parallel Call Transfer Function between two same models in parallel.
- Mute Function
- Programmable Flash function (100ms,300ms,600ms & 1000ms)
- 5 kinds of Normal Ringing Tone for Selection.

Trouble Shooting

No Ring

- Check if the handset is on the phone or line is broken.
- Check if the RING is in the OFF state, reset it.

Receive only

- Check if P/T mode is properly set.

Battery rust or leak

- Remove the rust or wipe out the leaking liquid.

Noise

- Check if the circuit is broken. (Change the circuit)
- Check if the connector is moist or rust (Change the connector)

Ring once then disconnect when receive a call. Dialing function is available

- Check if connector is in a moist environment.
- Check if too many extensions are used together or the quality of extension is not good enough (Change the bad extension)

LCD become dim

- Check if LCD contrast is properly set or battery is in low-battery state. (Adjust LCD contrast, if the LCD is still dim, replace the battery.)

No ring

- Check if the RING is in the OFF state, reset it.

Most of the functions failed

- Check if the battery is in low-battery state. (Change the battery)
If battery is in normal state (Remove the battery, unplug the lines and reinstall after 10 minutes)

NOTE: Due to continuous product development all features and specifications are subject to change without prior notice